



Please ensure that the spring is placed on the front of the plate and next to the screw head before installing the plate.