


## Our Signs Make You Shine!

## Lark Post in Ground Installation:

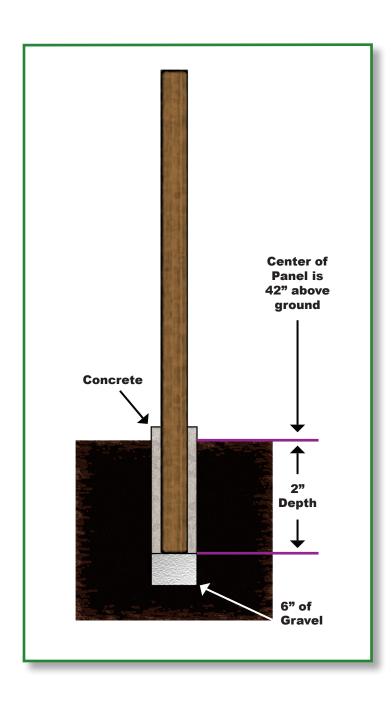


- **I.** Dig 8-10" wide hole x 30" deep.
- **2.** Put 6" gravel in the bottom.
- Attach post to the panel and insert post into the hole.(See instructions on back.)
- 4. The center of the panel should be 42" above ground.
- **5.** Fill the hole with concrete.
- **6.** Make sure the post is straight up and down.
- **7.** Hold in place till the concrete is set.
- **8.** Enjoy your new sign and your visitor's praise!

CONTACT karl@larklabel.com



## Our Signs Make You Shine!

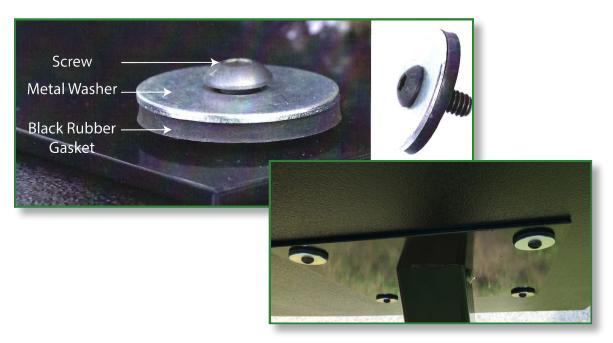

## Lark Post to Panel Installation:

- I. Lay panel face down on flat protective surface. Take your post and align the holes in the mounting plate with the screw threads in the panel.
- **2.** Stack the metal washer onto the rubber washer. Then put the screw through the washer holes with the screw head next to the metal washer.
- **3.** Put the washer-screw assembly through the hole on the mounting plate. Hand start the screw into the threads on the back of the panel.
- **4.** Tighten the screw with a T-30 wrench till snug. **DO NOT OVER TIGHTEN!**

CONTACT karl@larklabel.com

120 N Old Manor Wichita, KS 67208 316.682.5275 www.larklabel.com